

# Operating Manual Vegetable Cutter

# **ANLIKER XXL PRO**

**Translation of the German Original** 





# **Table of contents**

Generated:

Ralph Moretti 20 Nov 2019

1	ANLIKER XXL PRO Introduction	5
1.1	Operating manual	5
1.1.1	and the state of t	
1.1.2		
1.1.3	0 0 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
1.1.4	· · · · · · · · · · · · · · · · · · ·	
1.2	Manufacturer address	6
1.3	Device identification	7
2 :	Safety	
2.1	Intended use	
2.2	General safety guidelines	
2.3	User requirements	8
3 9	Structure	9
3.1	Structure of the basic unit	
3.2	Installation with PRO attachment	
3.3	Tray and plunger	
3.4	Equipment	
3.5	Accessories	
3.6	Materials	
3.7	Control elements for activation and deactivation	
3.8	OFF states	
4 :	Structure of the ANLIKER L vegetable cutter	
4.1	Unpacking and installation	
4.2	Consignment	
4.3	Reporting Damage	
4.4	Weight of the ANLIKER XXL PRO:	
4.5	Transporting the ANLIKER XXL PRO vegetable cutter	
4.6	Assembly and installation	
4.7	Electrical / electronic configuration	
4.8	Start-up	
4.9	Storage	
	Installation of the attachment	
5.1		
5.2	Mount the tray	
5.3	Correct insertion of the cutting discs, grating discs and dicing inserts	
5.3.1		
5.3.2	· · · · · · · · · · · · · · · · · · ·	
5.3.3		
5.3.4		
5.4	Cutting vegetables	
5.5	Use of the turning plunger	
	System care "cleaning concept"	
6.1	Cleaning the ANLIKER XXL PRO vegetable cutter	
6.2	Removing the top	27

Revised: Ralph Moretti 23.09.2024 Status: 300 released

Document number:

Page 2 of 36

Index BA



9.4

9.5

9.6

9.7

6.3	Cleaning the cutting discs, grating discs and dicing inserts (W)	28
6.3.1	Cleaning the dicer grid	28
6.3.2	Soft residues in the dicer grid	28
6.3.3	Hard residues in the dicer grid	28
6.3.4	Manual cleaning of the dicer grid	28
7 M	lounting the cutting disc holder	30
8 Tr	oubleshooting	31
8.1	Elimination of malfunctions	31
8.1.1	Device does not work	31
8.1.2	Device clogged	31
8.1.3	The dicing insert W (dicer knife and grid) cannot be removed	31
8.1.4	The cutting quality (surface structure) keeps deteriorating	31
8.1.5	The knife does not move freely	31
8.1.6	Cutter bar broken	31
8.1.7	The device can no longer be switched off	32
8.1.8	The device makes buzzing noises and runs irregularly	32
8.2	Service and information	32
9 Aı	nnex	33
9.1	Spare parts	33
9.2	Disposal	
9.3	Device transfer to third parties	34

Technical Specifications ......34

Dimensional drawing ANLIKER XXL PRO vegetable cutter......35

CE Conformity Declaration......36

Generated:	Revised:	Status: 300 released	Page 3 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# List of illustrations

Fig. 1: Nameplate				7
Fig. 2: Components of	the basic unit			9
Fig. 3: PRO tray				10
Fig. 4: Tray and plunge	er			10
Fig. 5: ANLIKER XXL PR	.0			
Fig. 6: Accessories kit?				
Fig. 7: Ejector				11
Fig. 8: Turning plunger				11
Fig. 9: XXL PRO attachi	ment			
Fig. 10 Ejector disc				
Fig. 11 Insert for cabba	age			12
Fig. 12: Various cutting	~			
-				12
•				
0				
•	•			
-	_			
Fig. 20: Tray placemen	·			
Fig. 21: Hinge ring				21
• •				
•				
•	•			
_				
•				
•	~			
_	•			
_				
-				
Fig. 33: Closed turning	_			
Fig. 34: Open turning f	•			26
	· · · · · · · · · · · · · · · · · · ·			30
-				
-	-			
-	-			
List of tables				
				7
•				
•				
•				
	_			
Generated:		Revised:	Status: 300 released	Page 4 of 3
Ralph Moretti		Ralph Moretti	Document number:	Inde
20 Nov 2019		23.09.2024		B.



### 1 ANLIKER XXL PRO introduction

This chapter informs on the scope of application and structure of the operating manual.

# 1.1 Operating manual

This operating manual enables the correct use and safe application of the ANLIKER XXL PRO vegetable cutter made by Brunner-Anliker AG.

Important: The operating manual must be readily accessible for all users of the ANLIKER XXL PRO vegetable cutter and therefore kept close to the machine.

### 1.1.1 Scope of application

This operating manual applies exclusively to the ANLIKER XXL PRO vegetable cutter made by Brunner-Anliker AG.

### Date of issue of this operating manual: 10.2019

The manual provides instructions on the preparation, operation and maintenance of the fully functional vegetable cutter and information on how to eliminate malfunctions. It is not meant, however, for the execution of repairs of cutter defects. If repairs become necessary, please contact your supplier or the manufacturer.

### 1.1.2 Target group and mandatory reading

The operating manual addresses all users of the ANLIKER XXL PRO vegetable cutter.

### Mandatory reading

All users are to read section 2 "Safety", page 7, before they start working with the ANLIKER XXL PRO vegetable cutter.

### 1.1.3 Pictures and drawings

The images used in this manual are for illustration purposes only and do not have to correspond 100% to your machine.

Generated:	Revised:	Status: 300 released	Page 5 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 1.1.4 Warnings and instructions for use

Please observe the following warning symbols and instructions for use.

# **HAZARD**



### **HAZARD**

Indicates that **death or serious physical injury will occur** if the respective precautions are **not** taken.

### **WARNING**



### WARNING

Indicates that **death or serious physical injury may occur** if the respective precautions are **not** taken.

# **CAUTION**



# **CAUTION**

Indicates that minor bodily injury or damage to property may occur if the respective precautions are not taken.

### **NOTE**

### NOTE

User information for technically correct and efficient use of the product or for better understanding of the product characteristics.

### 1.1.5 Abbreviations and symbols

We use abbreviations and easy to recognize symbols at the page margins only for measuring units and the above mentioned warning and usage symbols. (Examples: see "Warnings and instructions for use", page 6).

In this manual, the ANLIKER XXL PRO vegetable cutter will also be referred to as the "device".

### 1.2 Manufacturer address

Brunner-Anliker Maschinen AG Flughofstrasse 55 8152 Opfikon-Glattbrugg, Schweiz

Phone: +41 44 804 21 00

Mail: mail@brunner-anliker.com

Generated:	Revised:	Status: 300 released	Page 6 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



### 1.3 Device identification

Please indicate the device ID stamped on the nameplate attached to the side of the ANLIKER XXL PRO vegetable cutter for all inquiries and spare part orders. This will help us to answer your questions fast and correctly.

Information of the nameplate necessary for device identification (example):

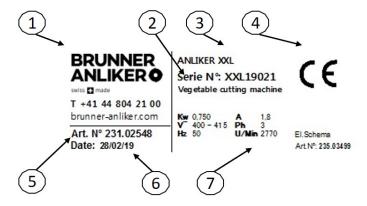


Fig. 1: Nameplate

Ite	em	Item	
1	Producer / contact data	5 Item number	
2	Serial number	6 Date of manufacture	
3	Device name	7 Motor performance characteristics	
4	Certification		

Table 1: Nameplate

# 2 Safety

This chapter provides information on the general safety guidelines that need to observed when handling and working with the ANLIKER XXL PRO vegetable cutter.

### 2.1 Intended use

The intended use of the ANLIKER XXL PRO vegetable cutter is the cutting and slicing of different types of vegetables in the catering and food processing industry. With the various cutting discs, the vegetables can be cut into different shapes and sizes. Only original cutting discs and dicing inserts and spare parts recommended by the manufacturer may be used.

The intended use includes the compliance with the manufacturer instructions and conditions for installation, startup, maintenance and operation of the vegetable cutter.

Any use that does not comply with the intended one and in particular the use of third-party or defective cutting discs is, without prior written consent given by the manufacturer, considered as contrary to its intended use. The manufacturer cannot be held liable for damages resulting from improper use of the ANLIKER XXL PRO vegetable cutter.

Generated:	Revised:	Status: 300 released	Page 7 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 2.2 General safety guidelines

The following safety guidelines apply to the handling of the ANLIKER XXL PRO vegetable cutter:

- Every user is responsible for his own safety and health. The user is to not allowed to carry out
  jobs whose risk he cannot assess. Such jobs need to be executed by persons qualified accordingly.
- All those working with the ANLIKER XXL PRO vegetable cutter must have been instructed on its
  use, read and understood the manufacturer's operating manual. See also "User requirements",
  page 8.
- The instructions provided in this operating manual must be adhered to.
- The user is obligated to operate the ANLIKER XXL PRO vegetable cutter in its fully functional state only and eliminate changes or defects, especially when related to safety issues, immediately.
- It is expressly prohibited to remove or alter safety devices and protective covers.

# 2.3 User requirements

All those handling the device must have been instructed on its use beforehand. Any specific special training is, however, not necessary.

# **CAUTION**



# **CAUTION**

Risk of injury if handled inexpertly! All those working with the ANLIKER XXL PRO vegetable cutter need to have read and understood the operating manual or be instructed by experienced users prior to its utilization.

Generated:	Revised:	Status: 300 released	Page 8 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 3 Structure

This chapter informs on the structure and accessories of the device.

### 3.1 Structure of the basic unit

The ANLIKER XXL PRO consists of a basic unit which rests on wheels, and a detachable top. Depending on the top, the device can be used for different jobs/cuts.

The basic unit houses the drive with power supply and the control elements. Figure 2 shows the basic unit and its single system components.

The pictures serve as examples.

For dimensional details, please refer to the dimensional drawing (Fig. 31).

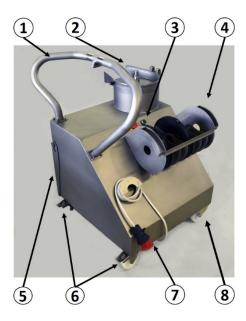


Fig. 2: Components of the basic unit

Item	Item	
1 Holder rail	5 Folding table - here: table folded up	
2 Housing top	6 2 caster wheels with brake	
3 Control elements	7 Power cable with holder	
4 Cutting disc holder	8 2 fixed wheels	

Table 2: Components of the basic unit

Generated:	Revised:	Status: 300 released	Page 9 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 3.2 Configuration with PRO attachment

The PRO tray is mounted to the holder rail of the basic unit. From the tray, the foods can be feed into the filler spout or the round turning filler neck opening.



Fig. 3: PRO tray

Item	Item	
1 Filler spout	4 Tray	
2 Turning filler neck	5 Plunger mechanism	
3 Tray attachment	6 Outlet	

**Item** 1 Tray

Table 3: Tray environment

# 3.3 Tray and plunger

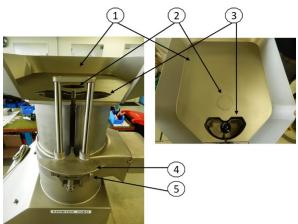


Table 4: Tray and plunger

2 Turning filler neck3 Filler spout

5 Plunger hinge

Plunger mechanism

Fig. 4: Tray and plunger

Generated:	Revised:	Status: 300 released	Page 10 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 3.4 Equipment

The customer can configure the device with different cutting discs, grating discs and dicing inserts. The basic unit always comes with tray attachment, operating manual, cleaning brush and microfuses.







Fig. 5: ANLIKER XXL PRO

Fig. 6: Accessories kit?

Fig. 7: Ejector



Fig. 8: Turning plunger

Generated:	Revised:	Status: 300 released	Page 11 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 3.5 Accessories

The ANLIKER XXL PRO can be equipped with an optional XXL (funnel) attachment. Supplementary accessories plus a large variety of cutting and grating discs as well as disc holders can be ordered from your sales partner or directly at our webshop. Please contact your distributor or visit our website for more information.







Fig.

9: XXL PRO attachment

Fig. 10 Ejector disc

Fig. 11 Insert for cabbage



 




Fig. 13: Multifeeder insert

Generated:	Revised:	Status: 300 released	Page 12 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



### 3.6 Materials

All housing parts and top are made of chromium steel.

### 3.7 Control elements for activation and deactivation

ANLIKER XXL PRO vegetable cutter operating concept:

- 1. Connect the device to the power outlet ("Electrical / electronic configuration", page 16) and ensure that the EMERGENCY OFF pushbutton is unlocked.
- 2. Fasten the attachment (tray or funnel) correctly and lock. Check the lock and holder reed switch for correct locking.
- 3. Start the cutting process: close the locking lever, press the ON button (red light). The button turns green. Fold the plunger down over the filler spout.

  Cutting disc turning

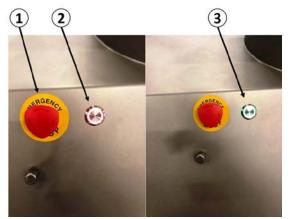


Fig. 14: EMERGENCY OFF and ON/OFF button

Ite	Item				
1	EMERGENCY OFF button				
2	Button red: OFF				
3	Button green: ON				

Table 5: EMERGENCY OFF and ON/OFF button

### 3.8 OFF states

The following switching states are possible:

- EMERGENCY OFF button pushed
- Locking lever not locked
- Tray not attached correctly

When all conditions are met, the button can be pressed and turns green.

The machine starts running when the plunger is in the filler spout.

Generated:	Revised:	Status: 300 released	Page 13 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 4 Structure of the ANLIKER XXL PRO vegetable cutter

# 4.1 Unpacking and installation

The device is consigned in a transport box.

Move the device out of the transport box on a makeshift ramp of sheet metal or wooden boards.

# **CAUTION**



Tipping hazard

The device weighs around 100 kg and may fall over when moved out of the box. We strongly recommend that the device is moved out of the box and down the makeshift ramp by two people.

Watch the center of gravity.

Or transport the device by means of a stacker truck. To avoid damage, place wooden boards under the device and ensure that no cables get stuck.

The ANLIKER XXL PRO vegetable cutter should not be lifted and transported by hand. If, however, manual lifting and transporting is inevitable, always work in two and lift the device at its holder rail.

The ANLIKER XXL PRO vegetable cutter has two fixed wheels and two caster wheels with brakes. Engage the caster wheel brake catches before carrying out any jobs on or with the device and release them only if the vegetable cutter needs to be moved.

Place the device on a plane and stable surface. Make sure to leave enough space on all sides for safe operation.

# 4.2 Consignment

The ANLIKER XXL PRO vegetable cutter was cleaned at the manufacturer before dispatch. We recommend, however, to clean the device prior to its first use with a food grade cleaning product.

# 4.3 Reporting damage

Notify the forwarder, insurance agent, supplier / service center immediately If the vegetable cutter is consigned damaged due to insufficient packaging or inadequate transport. The contact addresses are listed on pages 6 and 32.

### 4.4 Weight of the ANLIKER XXL PRO:

The vegetable cutter weighs 100 kg.

### **NOTE**

# Note

• Check the consignment for completeness. Compare the contents with the delivery note. If components are missing, please contact your supplier.

Generated:	Revised:	Status: 300 released	Page 14 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



Notify our after-sales service, the forwarder and the insurance agent immediately if the device is consigned damaged due to insufficient packaging or inadequate transport.

# **CAUTION**



# **CAUTION!**

• Heavy load! The heavy weight might damage the musculoskeletal system.

Generated:	Revised:	Status: 300 released	Page 15 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



### 4.5 Transporting the ANLIKER XXL PRO vegetable cutter

The ANLIKER XXL PRO stands on wheels and can so be easily transported from one place to another. Remember to open the caster wheel brakes to relocate the vegetable cutter. At its new place of use, secure stability by snapping in the brake catches.

Release the brakes only if the device needs to be moved!

# 4.6 Assembly and installation

Ensure ergonomic work situations: Always place the device on a plane and solid surface with a minimum size of 800 mm x 1100 mm.

Leave sufficient space around the vegetable cutter to swing open the tray for the exchange of cutting discs, grating discs and dicing insert.

Connect the machine as close as possible to the power outlet. Avoid tripping hazards! Do not route the cables where people walk frequently!

If you are uncertain about the installation site and/or have questions regarding installation itself, please contact Brunner-Anliker AG (the contact address is provided on page 6 or 32).

# 4.7 Electrical / electronic configuration

The ANLIKER XXLPRO has a 2-m long connection cable.

To avoid tripping hazards, do not route the cable across passageways.

Check the direction of rotation before moving the vegetable cutter to another location; adapt the plug if necessary. This job must be carried out by an authorized electrician.

# **HAZARD**

### HAZARD!



- Defective electrical components may be live and pose a life-threatening hazard.
- Do not drive over, crush or pull on the cable(s).
- Disconnect the device from the mains supply before working on the electrical equipment.
- Eliminate defects on electric components / modules immediately. In the event of and to avoid acute danger, the equipment must not be operated in defective or inadequate condition.

### **CAUTION**



### **CAUTION!**

Please observe the electrical data on the nameplate (see also page 7) before connecting the device to the mains supply.

### NOTE

Generated:	Revised:	Status: 300 released	Page 16 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



### Note

- Brunner-Anliker AG does not accept any liability for events and damages originating from electrical installation
- Protection against unexpected start-up: observe the national regulations!

# 4.8 Start-up

Please observe the following guidelines for first startup and test run.

- Ensure that there are no foreign bodies in the vegetable cutter's filler spouts!
- Check the direction of rotation and adapt the plug if necessary. This job must be carried out by an authorized electrician.

# **HAZARD**

### HAZARD!



- Do not change or modify the ANLIKER XXL PRO vegetable cutter or add any
  equipment which might impair the safety or function of the device. Otherwise
  the device no longer complies with the CE standards.
- Check the ANLIKER XXL PRO safety functions at regular intervals. Malfunctions
  may massively impair its functions and result in severe injury to personnel
  and/or damage to the machine!

### **CAUTION**



### **CAUTION!**

• Always adhere to the local accident prevention regulations!

### NOTE

### Note

- The user must have read and understood the operating manual and in particular the chapter on safety regulations before working with the machine.
- The machine may only be operated with the outlet cover safely in place.

Generated:	Revised:	Status: 300 released	Page 17 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 4.9 Storage

If the ANLIKER XXL PRO vegetable cutter is not used for a longer period of time, observe the following conditions to keep it fully functional:

- The storage place must be dry and clean.
- The ANLIKER XXL PRO vegetable cutter must not be exposed to extreme cold or heat.
- The device must be kept clean.
- The ANLIKER XXL PRO vegetable cutter must be packed or covered against the ingress of dirt and dust.

# **NOTE**

### Note

• Brunner-Anliker AG cannot be held liable for damages caused by corrosion due to improper storage, e.g. in moist rooms or similar.

Please contact our after-sales service before returning the machine into service after a prolonged period of standstill.

All mechanical parts need to be inspected. In particular:

- check all components for corrosion (and deterioration) damage.
- check all cutting discs for damage and cutting quality.

Generated:	Revised:	Status: 300 released	Page 18 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 5 Installation of the attachment

The ANLIKER XXL PRO vegetable cutter can be used for a myriad of jobs.

Observe the following steps when inserting cutting discs, grating discs and dicing inserts:

# **WARNING**



# Cut injury due to sharp cutting faces

- The knives and tips of the grating disc perforations are extremely sharp and now lie open.
- Danger of cuts and skin abrasions!

Any already mounted attachments need to be removed before a new one can be installed. Separate the device from the power supply.

# 5.1 Mounting the attachment



Place the PRO attachment so that the openings match.

Fig. 15: Place the attachment



Fig. 16: The hinges match

Generated:	Revised:	Status: 300 released	Page 19 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA







Close the top and lock with the locking lever. Make sure the top locks correctly.

Fig. 17: Locking the newly attached piece

not get stuck!).



Insert the plunger int the hinge opening (the hinge must

 




Fig. 19: Fixing the rod in place

After complete and correct insertion of the plunger rod, it can be fixed in place with the lock.

Generated:	Revised:	Status: 300 released	Page 20 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 5.2 Mounting the tray



Fig. 20: Tray placement

Open the tray lock and place the tray on the holder rail. The holder rail features a hinge ring for lock placement.



Fig. 21: Hinge ring



Fig. 22: Tray attached correctly

The supports must lie on the holder rail when the tray is placed on the filler spout.







Fig. 23: Tray attached incorrectly

Generated:	Revised:	Status: 300 released	Page 21 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA





Now the locking lever can be closed and locked in place.

Fig. 24: Locking the tray in place

Generated:	Revised:	Status: 300 released	Page 22 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 5.3 Correct insertion of the cutting discs, grating discs and dicing inserts

# 5.3.1 Preparing the ANLIKER XXL PRO vegetable cutter



Fig. 25: Tray swung open

Swing the tray open, open the locking lever and swing the top to the side.



Fig. 26: Top swung aside

# 5.3.2 Insertion of ejector or ejector disc



Prior to inserting the cutting disc, install the ejector or ejector disc. It sits correctly when it almost (but not quite) touches the bottom of the cutting chamber. Without ejector/ejector disc, the cut food accumulates beneath the cutting disc, the cutting disc is pushed up and might damage cutting head and knives.

Fig. 27: Inserted ejector



# 5.3.3 Insertion of cutting or grating disc

Place the disc on the drive shaft. Turn the disc slightly until it engages with the pin on the drive shaft and sits correctly (observe upper flushness with the drive shaft).

Correct cutting disc placement is possible only if disc hub and pin are absolutely clean.

Fig. 28: Inserted cutting disc

Generated:	Revised:	Status: 300 released	Page 23 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# **WARNING**



# WARNING

- The knives and tips of the grating disc perforations are extremely sharp and now lie open.
- Danger of cuts and skin abrasions!

# **NOTE**

# Note

• The discs fit the drive shaft perfectly. Never push of force them down on the drive shaft with an excess of pressure.



### 5.3.4 Close the attachment

Close the attachment and lock in place with the locking lever.

Fig. 29: Locking lever in locked position

Generated:	Revised:	Status: 300 released	Page 24 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 5.4 Cutting vegetables



Place a suitable container (food container 1/1) on the folded down table

or

if the table is folded up, the cut goods can be delivered directly into large processing trolleys or bowls.

Fig. 30: Food container on the folded down table

# **NOTE**

### Note

• The machine may only be operated with the outlet cover safely in place.



Fig. 31: Cover mounted onto the outlet

**HAZARD!** 

# **HAZARD**



- Any reaching into the outlet while the machine is running is strictly prohibited!
- Danger of cutting or crushing hands and fingers.

Generated:	Revised:	Status: 300 released	Page 25 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 5.5 Use of the turning plunger



Fig. 32: Operation with turning filler neck

For turning plunger use, the filler neck flap must be opened first: swing the tray open, open the turning plunger flap and swing it out until it is fixed in place by the magnet.



Fig. 33: Closed turning filler neck opening



Fig. 34: Open turning filler neck opening

Generated:	Revised:	Status: 300 released	Page 26 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 6 System care "cleaning concept"

This chapter describes the cleaning procedure for the device and its cutting discs, grating discs and dicing inserts.

For cleaning, the user may dismantle the device only as far as described here.

Attachment piece and plunger can be removed and cleaned without the need of tools.

# 6.1 Cleaning the ANLIKER XXL PRO vegetable cutter

The outside of the device can be simply hosed down (splash water). High-pressure cleaners must NOT be used.

# 6.2 Removing the top

Remove the attachment in reverse order to "Installation of the attachment" XXL PRO on page 19.

The first step is to separate the device from the power supply.

Open the lock on the funnel holder and remove the funnel.

Pull the screw blades out of the attachment.

Unlock the hinge on the attachment.

Unlock the locking lever, open the hinge, remove the attachment.

Generated:	Revised:	Status: 300 released	Page 27 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 6.3 Cleaning the cutting discs, grating discs and dicing inserts (W)

Use the nylon brush included in the consignment to clean the cutting discs, the grating discs and the dicing inserts (dicing knives and dicer grid) under running water.

Never clean the dicer grid with metal objects or by tapping it on the edge of a table. Best clean the grid by putting it in a combi steam oven at 90 degrees for about 10 minutes. Then brush the vegetable residues off under running water (the brush is part of the consignment).

### **NOTE**

### Note

Cleaning in the dishwasher might reduce the life of the knives.

### 6.3.1 Cleaning the dicer grid

After vegetable processing, the square grid holes are filled with vegetable residues. Proceed as follows to remove the vegetable/fruit residues:

# 6.3.2 Soft residues in the dicer grid

Soft vegetable and fruit types such as tomatoes, peppers, pears, kiwis, bananas, avocados etc are easily removed by holding the back of the grid under running water and brushing it with the brush included in the consignment.

### 6.3.3 Hard residues in the dicer grid

Hard vegetable and fruit types can be removed in two different yet gentle ways: If you own a combi steam oven: Put the dicer grid into 90-degree oven for about 10 minutes to cook the residues. Then hold the front of the grid under running water and brush the rests out with the brush included in the consignment.

# 6.3.4 Manual cleaning of the dicer grid

Insert the dicer grid without knife into the device. Hold the dicer grid with one hand (fingers on the outer rim). Remove the vegetables with the other hand by pushing a raw, long carrot horizontally onto and through the grid holes. Then hold the front of the grid under running water and brush the remaining vegetable pieces off with the brush included in the consignment. Pieces stuck in the holes near the grid edges can be removed with a thin wooden skewer.

Generated:	Revised:	Status: 300 released	Page 28 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# **NOTE**

### Note

 Use food grade detergents only. (no industrial fat solvents)

# **WARNING**

# WARNING



- Ensure that the device is switched off with the ON/OFF switch prior to any maintenance job.
- Disconnect from the mains!
- The ANLIKER XXL PRO vegetable cutter must not be cleaned with a stream-jet or high-pressure washers.
- The use of aggressive cleaning agents is strictly prohibited.

# **CAUTION**



# **CAUTION**

- The knives are extremely sharp and now lie open.
- Danger of cuts and skin abrasions!

Generated:	Revised:	Status: 300 released	Page 29 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 7 Mounting the cutting disc holder



The cutting disc holder can accommodate up to six different cutting discs. Its simple fastening principle allows it to be installed right where it is needed

Fig. 35: Cutting disc holder



The portable cutting disc holder can easily be taken along to the place of use.

It can be mounted vertically or horizontally to a stable wall.

Fig. 36: Wall-mounted cutting disc holder



The vegetable cutter is equipped with two hooks located below the EMERGENCY OFF button for easy attachment of the cutting disc holder.

Fig. 37: Hooking up the cutting disc holder

Generated:	Revised:	Status: 300 released	Page 30 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 8 Troubleshooting

The following chapter describes possible disturbances which might occur during operation, and their elimination.

### 8.1 Elimination of malfunctions

The machine is built to endure and therefore not very susceptible to malfunctions. Action in case of malfunctions:

First measure in case of malfunctions: Switch off the device! In case of unpleasant smells, unplug the mains plug.

# 8.1.1 Device does not work

- 1. Check the socket function by connecting another device.
- 2. Check whether the EMERGENCY OFF button has been reset
- 3. Check whether the attachment piece has snapped in correctly
- 4. Check whether the locking lever is locked
- 5. Check whether all three mains phases are provided energy
- 6. Has the motor overheated? If the thermoswitch was deactivated due to overheating, allow the device to cool off. It should then restart easily
- 7. If the device still does not work, contact a technician or the Brunner-Anliker after-sales service.

# 8.1.2 Device clogged

Nothing goes in, nothing comes out. Switch off the device, take apart and clean (see item 7).

### 8.1.3 The dicing insert W (dicer knife and grid) cannot be removed

The dicer knife bayonet catch was not unlocked correctly. Rotate the dicing knife carefully counterclockwise and keep in place to allow unlocking of the bayonet catch and simultaneous removal of both parts from below.

# 8.1.4 The cutting quality (surface structure) keeps deteriorating

If the quality of the cut diminishes, the respective cutting disc should be replaced. We provide attractive exchange options! Get in touch with us.

### 8.1.5 The knife does not move freely

- A) the hub is dirty and the knife does not sit correctly
- B) the ejector has not been inserted.

### 8.1.6 Cutter bar broken

The cutter bars can break when they are no longer sharp or if they are collide with an object.

IMPORTANT: Always search for the knife or its parts when broken.

### WARNING

Generated:	Revised:	Status: 300 released	Page 31 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA





### **WARNING**

- High risk of injury for the customer/guest.
- The operator is responsible if such malfunctions occur.

# 8.1.7 The device can no longer be switched off.

Push the EMERGENCY OFF button! Please contact a technician.

# 8.1.8 The device makes buzzing noises and runs irregularly

Please contact a technician.

### 8.2 Service and information

Please contact our Service Line for all problems and questions that are not described or cannot be solved.

Address: Brunner-Anliker Maschinen AG

Flughofstrasse 55

8152 Opfikon-Glattbrugg, Schweiz T: +41 44 804 21 00

mail@brunner-anliker.com

More information on our website at brunner-anliker.com

Generated:	Revised:	Status: 300 released	Page 32 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



### 9 Annex

### 9.1 Spare parts

Spare parts must meet the technical requirements specified by the manufacturer. This compliance is guaranteed for original spare parts. Use original spare parts only. Our warranty is void if third-party parts or parts which have not been approved in writing are used.

### NOTE

### Note

- Some wear and spare parts are subject to delivery periods and may not always be available at short notice.
- Please note that the delayed availability of spare parts may result in consequential damage and production losses.
- Always indicate the device number, device type and item number when ordering spare parts.

# 9.2 Disposal

Dispose of the system, system parts, accessories and packaging in an environmentally compatible manner.

# NOTE

### Note

- Resource recycling instead of waste disposal!
- Prior to their disposal, clean the materials of substances that might endanger health and environment.
- Bring metal parts to a metal collection point.
- Bring plastic parts to a plastic collection point.
- Bring electric parts to a collection point for electric components.
- See to professional disposal or contract a waste disposal company.

If this operating manual does not answer all of your questions, please feel free to contact our aftersales service (see page 32).

Generated:	Revised:	Status: 300 released	Page 33 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



### 9.3 Device transfer to third parties

All liabilities by Brunner-Anliker AG cease if the ANLIKER XXL PRO vegetable cutter is sold and transferred to a third party.

# 9.4 Technical Specifications

Machine type	ANLIKER XXL PRO vegetable cutter	
Electrical connection	3 x 400 V, 50 Hz / 1 x 115 V, 60 Hz	
Electric motor	0.75 kW / 1.1 kW	
Weight	100 kg	
Protection category	IP 26, splash water	
Dimensions L x W x H	1000 x 1010 x 1528 mm	

Table 6: Technical specifications ANLIKER XXL PRO

# 9.5 Warranty

During the warranty period, the machine may only be repaired and maintained by the manufacturer. Upon request, the manufacturer may authorize certain exceptions in writing. The guarantee comprises only and exclusively the part to be replaced plus replacement at the producer site. The warranty exclusively relates to the part to be replaced and its replacement at the manufacturer's factory, but not to a service in connection with a warranty repair not conducted by the specialist staff at our service center (refer to page 32) or by the manufacturer plant itself

The warranty period for the ANLIKER XXL vegetable cutter is two years (or six months according to the "Machine in continuous operation" section in our General Terms and Conditions"). Wear parts or improper handling are excluded from the warranty.

Generated:	Revised:	Status: 300 released	Page 34 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



# 9.6 Dimensional drawing ANLIKER XXL PRO vegetable cutter

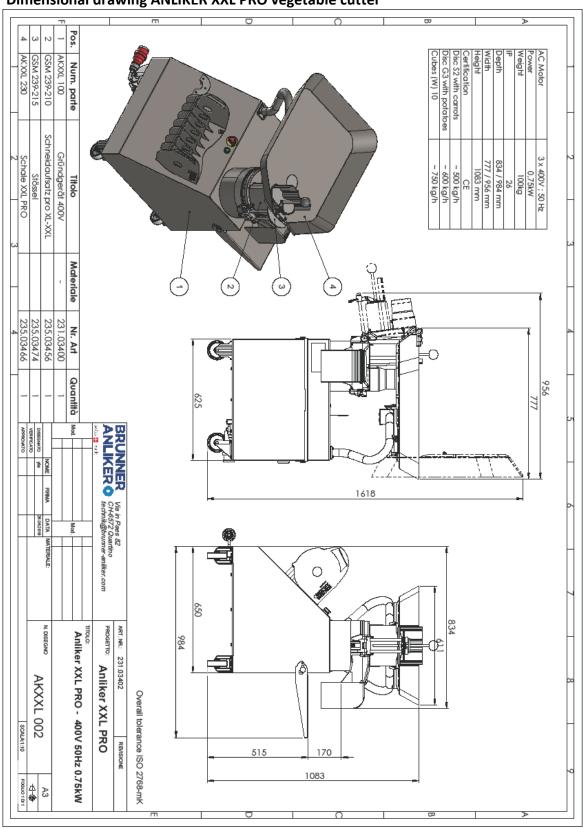


Fig. 38: Dimensional drawing ANLIKER XXL PRO

Generated:	Revised:	Status: 300 released	Page 35 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA



### 9.7 **CE Conformity Declaration**



Wir / Nous / We,

Brunner-Anliker Maschinen AG T+41 44 804 21 00 Flughofstrasse 55

8152 Opfikon-Glattbrugg info@brunner-anliker.com Schweiz brunner-anliker.com

### EG-Konformitätserklärung

CE Déclaration de conformité EC Declaration of conformity

Brunner-Anliker Maschinen AG

Flughofstrasse 55

8152 Opfikon-Glattbrugg

Schweiz

Beschreibung des Produkts erklären in alleiniger Verantwortung, dass das Produkt déclarons de notre seule responsabilité que le produit bearing sole responsibility, hereby declare that the product

Gemüseschneidemaschine

Description du produit Description of product Vegetable cutting machines

inklusiv Schneidscheiben auf Rechnung inclus les disques mentionnés sur facture including Discs mentioned on invoice

Typenreihe / Série type / Type series ANLIKER XXL / XXL PRO

auf das sich diese Erklärung bezieht, mit der/den folgenden Norm(en) oder normativen Dokumenten übereinstimmt: auquel se rapporte la présente déclaration est conforme aux normes ou aux do cuments normatifs suivants.

referred to by this declaration is in conformity with the following standards or normative documents.

Bestimmungen der Richtlinie Désignation de la directive provisions of the directive

Titel und/oder Nummer sowie Ausgabedatum der Norm(en):

titre et/ou numéro ainsi que date d'émission de la/des norme(s) : title and/or number and date of issue of the standard(s):

2006/42/EG: Maschinenrichtlinie 2006/42/CE: directive Machines 2006/42/EC: Machinery Directive

2014/30/EU Richtlinie 2011/65/EU

DIN EN ISO 12100:2011-03 DIN EN ISO 13849-1:2016-06 DIN FN ISO14119-2014-03

DIN EN 1672-1:2014-12 DIN EN 1672-2 :2009-07 DIN EN 1678 :2011-02

DIN EN 55014-1 :2018-08 DIN EN 55014-2 :2016-01 DIN EN 60204-1 :2007-06 DIN EN 60335-1 :2012-10

Mitteilung über Anerkennung der Qualitätssicherung: Communication sur la reconnaissance de l'assurance de la qualité: Report on the acknowledgment of the quality assurance:

Opfikon, September 2023 35\_\_\_\_

Ausstellung: Brunner-Anliker Mschinen SA Ralph Moretti / PCO
Via in Paes 82
6572 Quartino, Schweiz

Rolph Moretti / PCO
Via in Paes 82

M. Benkovics

Technischer Direktor / Technical Director

Ausgestellt:	Geprüft:	Geändert:	Status: 300 Freigegeben	Selte: 1
Raiph Moretti	Michel Benkovics		Unterlagennummer:	Index
23.08.2021	25.08.2021	05.09.2023		BA

Fig. 39: CE Conformity Declaration

Generated:	Revised:	Status: 300 released	Page 36 of 36
Ralph Moretti	Ralph Moretti	Document number:	Index
20 Nov 2019	23.09.2024		BA